

Installation Guide

SoundStop® Underlayment

FOR HARDWOOD AND LAMINATE FLOORING

Easy Sound Deadening Solutions for Better Living

Gather just a few simple tools:


 Straight edge

 Razor knife


 Tape measure

No glue or nailing required.


Install SoundStop® Underlayment in 5 Easy Steps

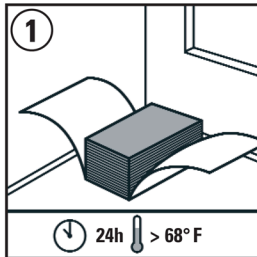


Acclimate SoundStop® Underlayment in installation area for 24 hours at room temperature, above 68°.

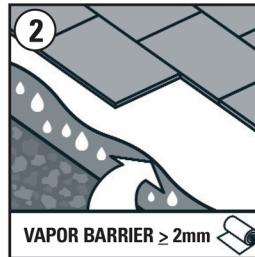


Install a 2 mm or greater vapor barrier over mineral based subfloor (e.g. concrete).

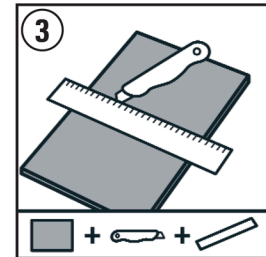

Cut and install SoundStop® Underlayment panels to fit size of room.

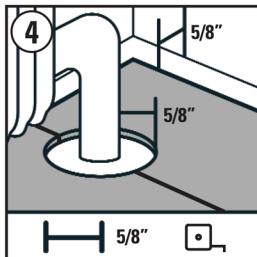

Keep all SoundStop® Underlayment 5/8" from pipes and walls.

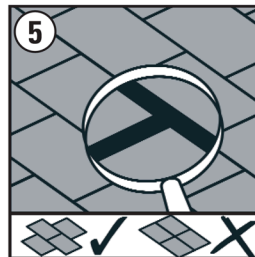


Stagger all seams for best performance. Avoid gaps or spacing.

Apply only as much SoundStop® Underlayment in one day as can be covered by completed flooring system the same day.

For additional technical information, warranty and warnings, refer to back of sales sheet found at www.knightcelotex.com.


Apply Finished Flooring Over SoundStop® Underlayment

To install click laminate flooring

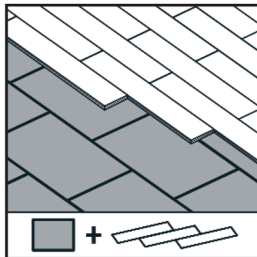


Stagger all laminate floor material seams. Do not line up with SoundStop® Underlayment seams.

To install rolled laminate flooring

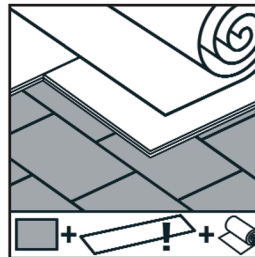

Adhere second subflooring, avoiding shared seams with SoundStop® Underlayment seams. Roll laminate floor material, avoiding shared seams with second layer of subflooring.

To install parquet or hardwood flooring

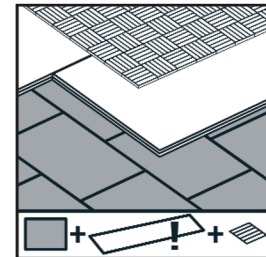

Adhere second subflooring, avoiding shared seams with SoundStop® Underlayment seams. Stagger all parquet or hardwood materials seams, avoiding shared seams with second layer of subflooring.

Helpline:

1.800.596.9699

or visit www.knightcelotex.com

Product ordering: 1.800.233.8721

© Knight-Celotex Fiberboard 2006
SSUIS3.06



Knight-Celotex Fiberboard
a Knight Company

Innovations in Fiber Technology®